



Fax.....+ 47 35 98 56 10

Web-Site..... www.dnh.no

.....dnh@dnh.no


H-66(T)


ENGLAND DNH WW Ltd


Phone.....+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk

GERMANY DNH GmbH


USA DNH Speakers Inc

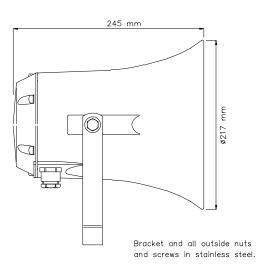

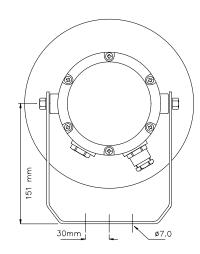

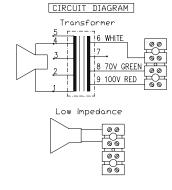

Secondary	
nomina	l tappings
1:4	25,0 W
1:3	12,5 W
2:4	8,0 W
1:2	7,0 W
3:4	3,0 W
2:3	1.7 W

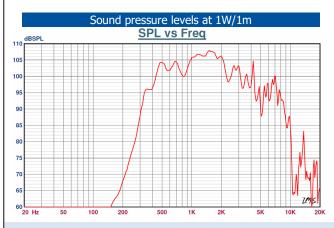

Specifications	
Material / Color	Aluminum alloy SS4261 / RAL 7035
Mounting	Bracket
Termination	Screw terminal
Weight w/transformer	3,8 kg
IP-rating	67
Max. / min. amb. temp	110°C / -50°C
Rated power	25W
SPL 1W/1m	108 dB
SPL rated power	121 dB
Effective freq. range	300 – 9000 Hz
Dispersion (-6dB) 1kHz / 4kHz	125° / 35°
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- Unscrew lid, lead cable through cable gland and connect to terminal (70V or 100V).
- Tight cable gland and screw lid back on with 2,5 Nm to assure IP grade.
- Fasten the bracket with three screws and ensure to use all washers in the intended position. (To isolate the main body from the bracket).
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required.
- The aluminum surface of the loudspeaker should be treated regularly with paint at the same interval as with other similar outdoor equipment.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.